 



Read the instruction manual thoroughly before use. Keep the manual for future reference.



The USB-C port can detect whether the connected device is a power source or charging device and automatically switch between the input and output modes. If necessary, a manual switch between the two modes is possible by pressing the power button for 3 seconds.

If the PowerBank does not work, unplug the USB charging cable and reconnect it. It is normal that the PowerBank gets warm during use. It will gradually cool down to room temperature after fully discharged or recharged.

 
Connecting instructions
1. Connect the Micro-USB or USB-C port of the PowerBank with a power source (computer or USB power adapter)...



You can use the PowerBank to charge other devices (using USB-A or USB-C port) while it is being recharged (see chapter "Charging other devices").

2. Disconnect the USB charging cable when all LED indicators are lit.

Charging other devices
1. Connect the fully-charged PowerBank with the device through the provided USB charging cable or the cable provided by the device's manufacturer.

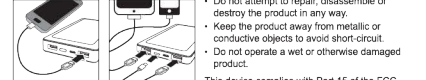


2. Disconnect the USB charging cable when charging is complete. The PowerBank will turn off automatically.

LED indicators
Refer to the LED indicators for battery level during charging or recharging. The PowerBank has the best battery strength when all LED indicators are lit.



GB
Depending on the battery level, the last applicable LED indicator flashes when the PowerBank is being recharged and all applicable LED indicators remain lit when it is charging other devices.

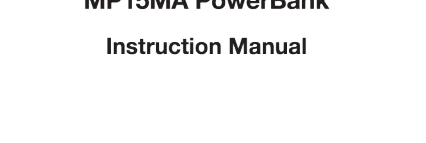


Useage tips
The USB-C port can detect whether the connected device is a power source or charging device and automatically switch between the input and output modes.

Repeating instructions
1. Connect the Micro-USB or USB-C port of the PowerBank with a power source (computer or USB power adapter)...

Safety information
Please read below safety notes carefully before use to avoid any personal injury and property damage caused by improper use of the product.



Před použitím si pozorně přečtěte návod k použití. Ponechte si návod pro budoucí použití.

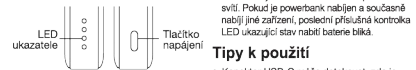

USB-A (výstup) USB-C (vstup/výstup) mikro USB (vstup) USB-A (vstup)


Návod k obsluze
Dobíjení powerbanku
1. Propojte mikro USB nebo USB-C konektor powerbanku se zdrojem napájení (počítač nebo napájecí USB adaptéř, výstup: 1 A)



You can use the PowerBank to charge other devices (using USB-A or USB-C port) while it is being recharged (see chapter "Charging other devices").

2. Disconnect the USB charging cable when all LED indicators are lit.

Charging other devices
1. Connect the fully-charged PowerBank with the device through the provided USB charging cable or the cable provided by the device's manufacturer.

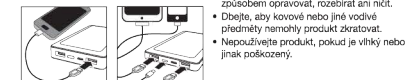

2. Disconnect the USB charging cable when charging is complete. The PowerBank will turn off automatically.

LED indicators
Refer to the LED indicators for battery level during charging or recharging. The PowerBank has the best battery strength when all LED indicators are lit.



GB
Depending on the battery level, the last applicable LED indicator flashes when the PowerBank is being recharged and all applicable LED indicators remain lit when it is charging other devices.



Useage tips
The USB-C port can detect whether the connected device is a power source or charging device and automatically switch between the input and output modes.

Repeating instructions
1. Connect the Micro-USB or USB-C port of the PowerBank with a power source (computer or USB power adapter)...

Safety information
Please read below safety notes carefully before use to avoid any personal injury and property damage caused by improper use of the product.




Használat előtt figyelmesen olvassa el a használati útmutatót. Őrítze meg az útmutatót a későbbi használatához.



USB-A (kimenet) USB-C (bemenet/kimenet) Mikro USB (bemenet) USB-A (kimenet)

Használati útmutató
A külső akkumulátor feltöltése
1. Csatlákoztassa a külső akkumulátor mikro USB vagy USB-C portját az áramforráshoz (számítógéphez vagy USB tápegységhez)...

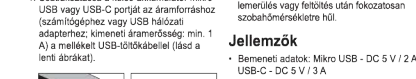

You can use the PowerBank to charge other devices (using USB-A or USB-C port) while it is being recharged (see chapter "Charging other devices").

2. Disconnect the USB charging cable when all LED indicators are lit.

Charging other devices
1. Connect the fully-charged PowerBank with the device through the provided USB charging cable or the cable provided by the device's manufacturer.




2. Disconnect the USB charging cable when charging is complete. The PowerBank will turn off automatically.

LED indicators
Refer to the LED indicators for battery level during charging or recharging. The PowerBank has the best battery strength when all LED indicators are lit.



GB
Depending on the battery level, the last applicable LED indicator flashes when the PowerBank is being recharged and all applicable LED indicators remain lit when it is charging other devices.

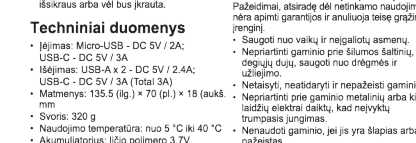

Useage tips
The USB-C port can detect whether the connected device is a power source or charging device and automatically switch between the input and output modes.

Repeating instructions
1. Connect the Micro-USB or USB-C port of the PowerBank with a power source (computer or USB power adapter)...

Safety information
Please read below safety notes carefully before use to avoid any personal injury and property damage caused by improper use of the product.




Használat előtt figyelmesen olvassa el a használati útmutatót. Őrítze meg az útmutatót a későbbi használatához.



USB-A (kimenet) USB-C (bemenet/kimenet) Mikro USB (bemenet) USB-A (kimenet)

Használati útmutató
A külső akkumulátor feltöltése
1. Csatlákoztassa a külső akkumulátor mikro USB vagy USB-C portját az áramforráshoz (számítógéphez vagy USB tápegységhez)...

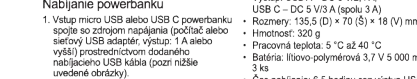

You can use the PowerBank to charge other devices (using USB-A or USB-C port) while it is being recharged (see chapter "Charging other devices").

2. Disconnect the USB charging cable when all LED indicators are lit.

Charging other devices
1. Connect the fully-charged PowerBank with the device through the provided USB charging cable or the cable provided by the device's manufacturer.




2. Disconnect the USB charging cable when charging is complete. The PowerBank will turn off automatically.

LED indicators
Refer to the LED indicators for battery level during charging or recharging. The PowerBank has the best battery strength when all LED indicators are lit.



GB
Depending on the battery level, the last applicable LED indicator flashes when the PowerBank is being recharged and all applicable LED indicators remain lit when it is charging other devices.

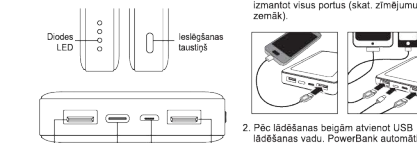

Useage tips
The USB-C port can detect whether the connected device is a power source or charging device and automatically switch between the input and output modes.

Repeating instructions
1. Connect the Micro-USB or USB-C port of the PowerBank with a power source (computer or USB power adapter)...

Safety information
Please read below safety notes carefully before use to avoid any personal injury and property damage caused by improper use of the product.




Használat előtt figyelmesen olvassa el a használati útmutatót. Őrítze meg az útmutatót a későbbi használatához.



USB-A (kimenet) USB-C (bemenet/kimenet) Mikro USB (bemenet) USB-A (kimenet)

Használati útmutató
A külső akkumulátor feltöltése
1. Csatlákoztassa a külső akkumulátor mikro USB vagy USB-C portját az áramforráshoz (számítógéphez vagy USB tápegységhez)...

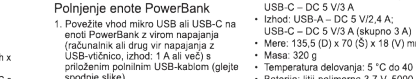

You can use the PowerBank to charge other devices (using USB-A or USB-C port) while it is being recharged (see chapter "Charging other devices").

2. Disconnect the USB charging cable when all LED indicators are lit.

Charging other devices
1. Connect the fully-charged PowerBank with the device through the provided USB charging cable or the cable provided by the device's manufacturer.




2. Disconnect the USB charging cable when charging is complete. The PowerBank will turn off automatically.

LED indicators
Refer to the LED indicators for battery level during charging or recharging. The PowerBank has the best battery strength when all LED indicators are lit.



GB
Depending on the battery level, the last applicable LED indicator flashes when the PowerBank is being recharged and all applicable LED indicators remain lit when it is charging other devices.

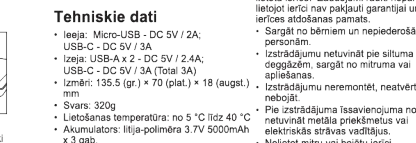

Useage tips
The USB-C port can detect whether the connected device is a power source or charging device and automatically switch between the input and output modes.

Repeating instructions
1. Connect the Micro-USB or USB-C port of the PowerBank with a power source (computer or USB power adapter)...

Safety information
Please read below safety notes carefully before use to avoid any personal injury and property damage caused by improper use of the product.



Használat előtt figyelmesen olvassa el a használati útmutatót. Őrítze meg az útmutatót a későbbi használatához.



USB-A (kimenet) USB-C (bemenet/kimenet) Mikro USB (bemenet) USB-A (kimenet)

Használati útmutató
A külső akkumulátor feltöltése
1. Csatlákoztassa a külső akkumulátor mikro USB vagy USB-C portját az áramforráshoz (számítógéphez vagy USB tápegységhez)...



You can use the PowerBank to charge other devices (using USB-A or USB-C port) while it is being recharged (see chapter "Charging other devices").

2. Disconnect the USB charging cable when all LED indicators are lit.

Charging other devices
1. Connect the fully-charged PowerBank with the device through the provided USB charging cable or the cable provided by the device's manufacturer.




2. Disconnect the USB charging cable when charging is complete. The PowerBank will turn off automatically.

LED indicators
Refer to the LED indicators for battery level during charging or recharging. The PowerBank has the best battery strength when all LED indicators are lit.



GB
Depending on the battery level, the last applicable LED indicator flashes when the PowerBank is being recharged and all applicable LED indicators remain lit when it is charging other devices.

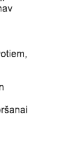

Useage tips
The USB-C port can detect whether the connected device is a power source or charging device and automatically switch between the input and output modes.

Repeating instructions
1. Connect the Micro-USB or USB-C port of the PowerBank with a power source (computer or USB power adapter)...

Safety information
Please read below safety notes carefully before use to avoid any personal injury and property damage caused by improper use of the product.

