


E0090 | E0091

GB | Portable radio with Bluetooth, MP3, DAB/DAB+/FM

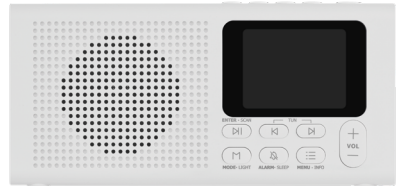

E0090



E0091

Contents

Safety Instructions and Warnings	2
Technical Specifications	3
Description	4
Getting Started	5

Safety Instructions and Warnings



Before using the device, read the instructions and make sure you understand them. Keep this document and the packaging for future use.



Follow the safety instructions provided in the manual.

- Improper installation and/or use may cause a fire or injury by electric current.
- Before installing, read the manual and take into account the specific properties of the space and location where the product will be installed.
- Do not open, disassemble, modify or alter the device unless there is a specific instruction to do so in the manual.
- Any unauthorised opening or repair voids all liabilities, rights to replacement or warranties.
- Use only with the original power cable.
- The product can be powered only by voltage that matches the parameters listed for the product.
- Servicing of the product may only be performed by a qualified technician to minimise the risk of injury by electric current.
- Disconnect the product from the power supply before cleaning.
- The product must not be used by persons (including children), whose physical, sensory or mental capabilities or lack of experience and knowledge prevent safe use of the product without supervision or instruction.
- Cleaning and user maintenance must not be performed by unsupervised children.
- Do not submerge the product in water or other liquids.
- Do not use the product if any of its parts are damaged or defective. Immediately replace the product if it is damaged or defective.
- Do not allow children to play with the packaging material. Keep the packaging material out of the reach of children.
- The power cable and product must always be placed so that they are not in the way of commonly used walking areas.
- Use the product only as described in this document.
- Prevent the product from falling and protect it against impacts.
- Do not use aggressive chemical detergents to clean the product.
- Supervise children so that they do not play with the product.

EMOS spol. s r.o. declares that products E0090 and E0091 are in compliance with the essential requirements and other applicable provisions of directives. The device can be freely operated in the EU.

The Declaration of Conformity can be found at <http://www.emos.eu/download>.



Technical Specifications

Power supply: DC 5.0 V / 1,200 mA or 4× batteries (LR6/AA)


Bluetooth: 2,402–2,480 MHz; e.i.r.p.: -1.81 dBm

DAB+: 174–240 MHz

FM: 87.5–108 MHz



Description

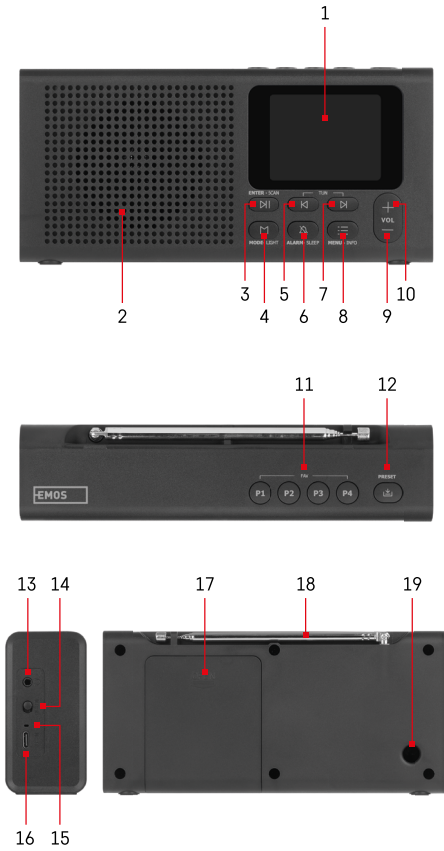

- 1 – Colour TFT display
- 2 – Speaker
- 3 – ENTER / Scan
- 4 – MODE / Light
- 5 – Tuning (shift) button
- 6 – ALARM / Sleep
- 7 – Tuning (shift) button
- 8 – MENU / Info
- 9 – Volume control –
- 10 – Volume control +
- 11 – The P1, P2, P3, P4 buttons are used to call up station speed selection
- 12 – PRESET
- 13 – Headphone socket (3.5 mm jack)
- 14 – ON/OFF button
- 15 – ON LED indicator
- 16 – USB-C power connector
- 17 – Battery cover (4× AA batteries, not included)
- 18 – Telescopic antenna
- 19 – Bass – reflex

Getting Started

1. Insert 4 AA batteries **(17)** into the radio or connect the radio to the mains using the enclosed power supply **(16)**.
2. Now turn the radio switch **(14)** to the ON position.
3. When the radio is switched on, automatic tuning starts.
4. When tuning is complete, briefly press the "MODE / Light **(4)**" button to select the desired radio mode. You can choose from 4 modes (DAB, FM, Bluetooth and Time).

DAB Mode

DAB Mode Settings

Switch on the radio, it will automatically switch to DAB mode.

In other modes, briefly press the "MODE / Light **(4)**" button to select the DAB mode. When the device enters DAB mode for the first time, it will automatically switch to DAB station search.

Station Selection

Briefly press the "tuning buttons (5, 7)" to choose the desired radio station.

Press the "ENTER / Scan **(3)**" button to select the radio station.

Press the "MENU/INFO **(8)**" button briefly to display information about the current radio station.

Briefly pressing the "ENTER / Scan **(3)**" button while listening enables you to enlarge the current station's logo on the screen (must be supported by the station itself).

You can also view: text information, programme type, set name, frequency, time and date, error rate of the received signal, codec, transmission speed or date.

Saving a Selected Station

If you long-press the "P1, P2, P3 or P4 **(11)**" buttons while listening to a tuned station, the current station will be stored under that position.

If you have already occupied the positions of favourite stations 1–4 and want to add additional stations to the list, long-press the "MENU / Info **(8)**" button in DAB mode.

Move the cursor with the "Tuning buttons **(5, 7)**" to "Save preset" and press the "ENTER / Scan **(3)**" button to access the list of favourite stations.

Select the desired position and press the "ENTER / Scan **(3)**" button again. The current station will be saved to the position you selected.

Other Features

If you long-press the "MENU / Info **(8)**" button in DAB mode, you can set/adjust the following in the same way: station list, preset recall, preset save, tuning, manual tuning, delete non-functional, illumination, time/date, alarms, sleep, equalizer, language, factory reset, system version.

FM Mode

FM Mode Settings

Switch on the radio and press the "MODE / Light **(4)**" button to switch to FM mode and confirm by pressing the "ENTER / Scan **(3)**" button.

Station Selection

Briefly press the "tuning buttons **(5, 7)**" to choose the desired radio station.

Press the "ENTER / Scan **(3)**" button to select the radio station.

Press the "MENU/INFO **(8)**" button briefly to display information about the current radio station.

By briefly pressing the "ENTER / Scan **(3)**" button, you can immediately view the radio text while listening.

You can also view: programme type, frequency, signal type, time and date, error rate of the received signal, codec, transmission speed or date.

Saving a Selected Station

If you long-press the "P1, P2, P3 or P4 **(11)** buttons" while listening to a tuned station, the current station will be stored under that position.

If you have already occupied the positions of favourite stations 1–4 and want to add additional stations to the list, long-press the "MENU / Info **(8)**" button in FM mode.

Move the cursor with the "Tuning buttons **(5, 7)**" to "Save station" and press the "ENTER / Scan **(3)**" button to access the list of favourite stations.

Select the desired position and press the "ENTER / Scan **(3)**" button again. The current station will be saved to the position you selected.

Other Features

If you long-press the "MENU / Info **(8)**" button in FM mode, you can set/adjust the following in the same way: save station, saved stations, scan settings, illumination, time/date, alarms, sleep, equalizer, language, factory reset, system version

Bluetooth Mode

Switch on the radio and briefly press the "MODE / Light **(4)**" button to switch to Bluetooth mode.

You will hear a "splash" sound, which means Bluetooth has turned on and the screen will say "Pairing".

Open Bluetooth on your phone and search for the name "Radio P-600", then tap the button to connect to the device.

After approximately 10 seconds, you will hear a "dong dong ding" sound, indicating a successful connection to the network.

The screen will display "Connected".

By briefly pressing the "Tuning buttons **(5, 7)**", you can switch between tracks at will.

Press the "ENTER / Scan **(3)**" button briefly to pause or restart the song being played.

Long-press the "ENTER / Scan **(3)**" button to disconnect from the mobile device.

More Settings

Screen Brightness Setting

Long-press the "MODE / Light **(4)**" button to adjust the brightness of the TFT screen.

Volume Setting

Briefly press the "volume control **(9, 10)**" button to set the desired volume.